

# CONVOY DISTRIBUTION LIMITED

---

## *Instructions for the use of Safecoat FR-31*

### **Typical Application**

- **SAFECOAT FR-31- Fire Retardant Fabric Treatment** can be applied by spraying, coating or immersing a fabric at any point in the manufacturing process.
- do not dilute or mix with other products.
- check the fabric for color-fastness before starting the treatment.
- distribute solution evenly across the entire surface, ensuring that solution does not flow or drip to the extremes whenever possible.
- dry on a horizontal drying rack, at moderate temperature (between 70 and 175°F) for optimal results.
- tumble dry fabric in a warm dryer, (maximum temperature should not exceed 175°F).
- iron fabric using a warm iron (maximum temperature 200°F). Iron a small area first, to ensure the color is not affected.
- to spray **SAFECOAT FR-31 Fire Retardant Fabric Treatment**, use a hand held or back pack pressurized spray container with an atomizer nozzle. Filter the solution into the tank to keep out any solids that may plug the nozzle. With daily use, the sprayer must be flushed out with clean warm water.

### **Coverage rate**

The required quantity depends on the absorbency of the material, its inherent flammability and its overall weight. As a rough guide:

- the maximum amount of **SAFECOAT FR-31 Fire Retardant Fabric Treatment** required is equivalent to the original weight of the material to be treated (80 to 100%).
- i.e.: if the dry fabric starts out weighing 1 lb., then it should pick up between 0.8 to 1 lb. of solution during treatment and retain an additional net added weight of 5.6 to 7 oz. after drying.

### **Fabric Cleaning and Care Instructions**


Detergents and water or shampooing (i.e.: of drapes, carpets, etc) will remove **SAFECOAT FR-31 Fire Retardant Fabric Treatment** and re-application will be necessary. Re-treat after laundering.

### **Application to Straw, Paper and Other Cellulose-based Products**

**Hay or Straw Bales for Display:** Approximately 1 quart of **SAFECOAT FR-31S Fire Retardant Treatment** per bale is required for good penetration. Spray on with an atomizer nozzle.

**Cardboard:** Corrugated cardboard is best treated with a fine atomized spray on both sides. Do not soak material in any one spot for too long a period, since this will warp the cardboard and make it lose its shape.

**Paper and Decorative Materials:** Thorough saturation of paper with a spray will work. For best results, hang paper during spraying. Total immersion can be used but a test sample is advised.

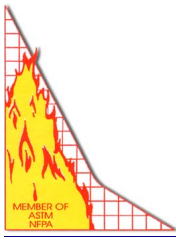

# CONVOY DISTRIBUTION LIMITED

---

## ***Hazard Class***

Safecoat FR-31 Fire Retardant Fabric Treatment is not subject to WHMIS Regulations, nor is it regulated by Transportation of Dangerous Goods.

## ***Test Results***

Safecoat FR-31 Fire Retardant Fabric Treatment is tested under **CAN/CGSB 4.2 27.1 MS**. The results show "**a high degree of flame resistance**" on fabrics such as:

- Polyester fabrics - 100%
- Cotton - 100%,
- Polyester/Cotton blend - 65/35%,

Each of these fabrics is a medium weight (drapery/tablecloth) fabric.

## ***Guarantee/Warranty***

Recommendations for the use of our products are based on tests carried out at government approved labs. Manufacturer and seller are not responsible for results where the product is used under conditions beyond our control. Under no circumstances will Magna Coatings Technology Inc be liable for consequential damages or damages to anyone in excess of the purchase price of the product or services.